RED DOT UNITS

OFF-ROAD Ship LTL Only R-9727 Rooftop

Air Conditioner


CONSTRUCTION • MINING • AGRICULTURE

The R-9727 sets the standard for rooftop air conditioners in tough work

environments. Renowned for its build quality, reliability, and performance, the R-9727

uses a sealed, long-life evaporator and condenser motor with a slinger ring and hubcap for protection from

weather and dust. The heavy-gauge steel casing is gusseted and reinforced for structural integrity. Rubber hood tie-downs unlatch to easily expose the components for service. Options include a hydraulic compressor kit, remote-mount filter, and in-line booster blower for a pressurized, dust-free cab.

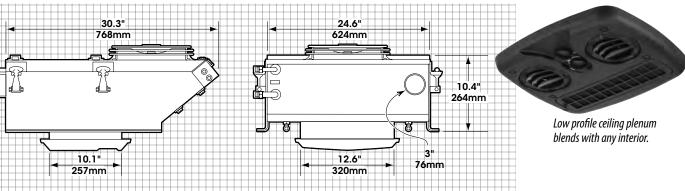

RedDOT

Shown with optional

hydraulic compressor kit.

R-9727 SPECIFICATIONS

BTUS	Cooling – 22,000 BTU/Hr with 36°F (6.4 kw w/2.2°C) refrigerant temperature and 80°F (26.7°C) wet bulb entering air		
AIR FLOW	Evaporator – 320 CFM (544 m3/h) Condenser – 850 CFM (1444 m3/h)		
WEIGHT	104 Lbs (47 Kg)		
MOTORS	Evaporator – One 12 VDC, three-speed, 24 VDC available Conden	ser – One 12 VDC, single-speed, 24 VDC available	
CURRENT DRAW	29 amps @ 13.6 VDC (includes 4 amps for A/C clutch) 15 amps @ 27.2 VDC (includes 2 amps for A/C clutch)		
CONTROLS	5 Three speed blower and adjustable thermostat		

R-9727 SYSTEM ORDERING GUIDE

	R-134a	NOTES	
UNITS	R-9727-2P R-9727-2-24P	12 VDC 24 VDC	
CONDENSER	Contained in R-9727 Unit		
INSTALLATION KIT	78R1605	Refrigerant hose and fittings	
OPTIONS	Winter Cover Stiffener Brackets Remote Mount Filters ** Repote Mount Filters ** Replacement Filters Replacement Gasket Kit Replacement Recirc. Filter Pressurizer Inlet Cap In-Line Booster Pressurizers * Replacement Receiver Drier Replacement Plenum Hydraulic Compressor Kit	RD-5-4031-0P RD-3-5790-0P 78R5100 78R5110 78R5210 RD-2-0961-0P 78R5300 RD-5-6423-0P 73R9202 73R9204 74R2536 RD-2-5974-0P RD-5-13484-0P	(Horizontal) (Vertical) (Remote Mount) (12 VDC) For use with Remote Mount Filters (24 VDC)
COMPRESSOR	Requires compressor and moun	ting kit	See 75 Series Compressor section on page 329
	* Booster Pressurizer Can Only E	Be Used With Remote Mount Filt	ters ** Must be used with In-line Booster Pressurizer